 
 


SPACE REQUIREMENTS AND PLANNING GUIDE

Width Measurements

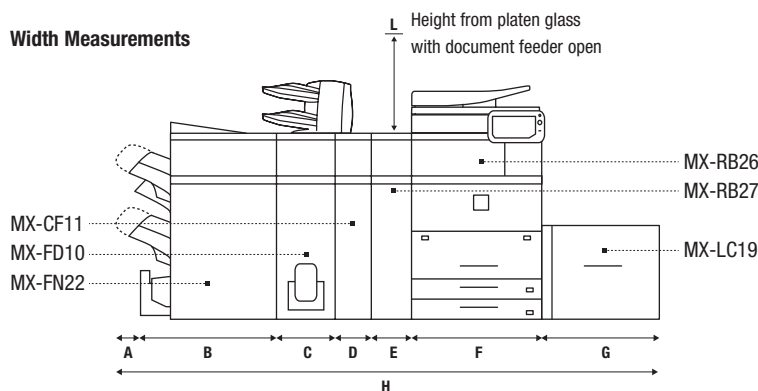

Depth Measurements (overhead view)

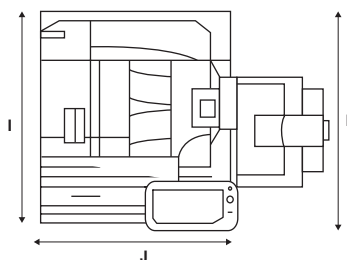

A	5"
B	30-3/4"
C	13-1/4"
D	6-1/2"
E	8-3/8"
F	26-1/8"
G	27-3/8"
H	117-3/8"
I	30-3/8"
J	26-1/8"
K	32-1/4"
L	20"

Note: In addition to the above dimensions, allow three feet of space on all sides for consumable replenishment, paper jam removal, and maintenance and service procedures. Images may not be to scale.

Installing Dealer

Plan ahead and make sure your installation is a great success! Remember to check the latest information on these products and make sure that the following items are available prior to installation.

- Verify dedicated power source and check for stability. The MX-M6570/M7570 Document Systems require a 120 VAC, 60 Hz power source and draw up to 16 Amps current (requires a 20 Amp circuit breaker).



The MX-M6570/M7570 main unit requires 110-127 V AC @ 60 HZ with a 20 A receptacle outlet and circuit breaker.



The MX-FN21 and MX-FN22 options each require 110-127 V AC @ 60 HZ with a separate 15 A receptacle outlet and circuit breaker.

- Confirm that you have the latest firmware available from www.sharp-idncservice.com to update your MX-M6570/M7570 Document Systems to the latest version.
- Some accessories require a product key for operation. You should obtain the accessory Application Code and machine's serial number to register the product key online prior to arrival at the customer location.
- Check to see if My Sharp™ online training is set up for the end-user.

 


- Verify that the customer has enough supplies on-hand to complete a large rush job. After-hours printing and/or holiday work may take place following an installation. See Supplies & Accessories list on the following page.


Design and specifications are subject to change without notice. All product dimensions listed are approximate.

© 2019 Sharp Electronics Corporation. All rights reserved. Sharp, Sharp OSA, My Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or affiliated companies. PCL is a registered trademark of HP Company. Adobe and PostScript are registered trademarks of Adobe Systems Inc. All other trademarks are the property of their respective owners.


Base Unit Measurements Shown with MX-FN34, MX-FN35, MX-PN16B, MX-RB26, MX-TR21

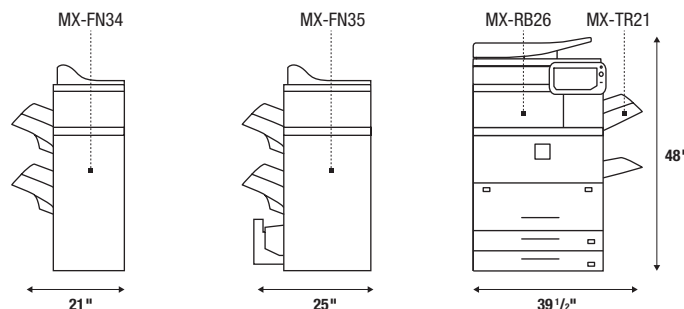

 Base Unit Measurements Shown with MX-FN21, MX-RB13, MX-CF11, MX-RB27, MX-RB26

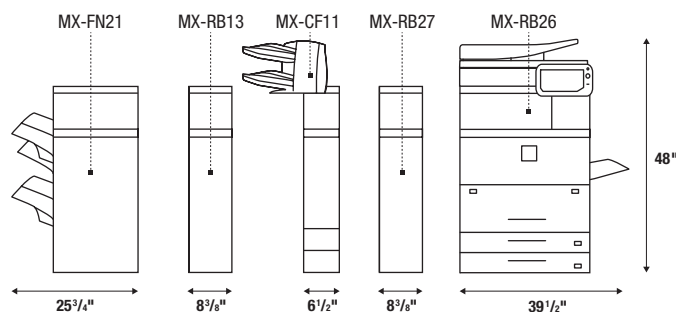

 
Base Unit Measurements Shown with MX-LC18 or MX-LC19

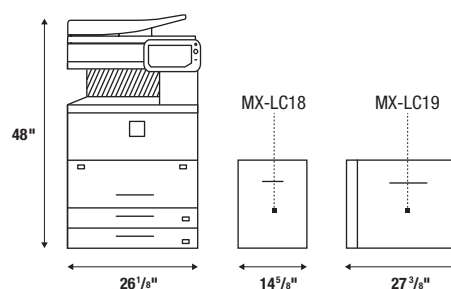

STEP 1: CHOOSE RIGHT SIDE EXIT TRAY AND PAPER FEED OPTIONS


Paper Feed Configurations

 These items are not required. The MX-LC18 cannot be used with the MX-LC19.

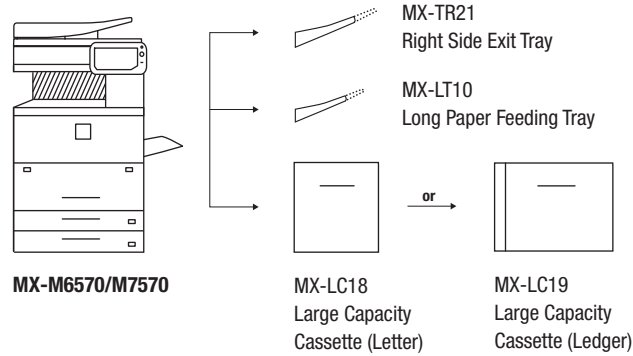

Supported Paper Weights

 1. Base Unit
Upper Drawer (tandem): 16 lb. bond to 28 lb. bond
Middle/Lower Drawer: 16 lb. bond to 80 lb. cover
Bypass: 15 lb. bond to 110 lb. cover
2. MX-LC18
16 lb. bond to 80 lb. cover
3. MX-LC19
16 lb. bond 80 lb. cover

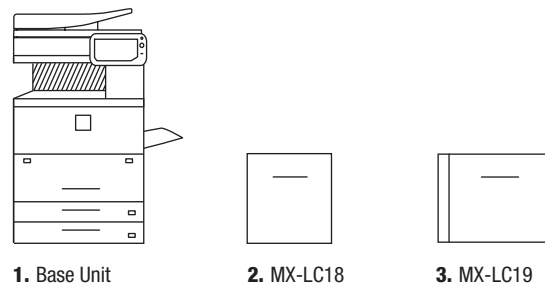

Supplies & Accessories

- | | | | |
|-------------------------|----------|---------------------------------|------------|
| • Black Toner Cartridge | MX-754NT | • Toner Collection Container | MX-700HB |
| • Black Developer | MX-754NV | • 120V/20A Power Filter | AR-D5143NT |
| • Drum | MX-754DR | • 120V/20A Digital Power Filter | MX-PCS-20D |

 
STEP 2: CHOOSE FINISHING CONFIGURATION

Configuration A

- A** The MX-TU15 must be installed if no finishing options are selected. This item cannot be combined with items from other finishing configurations.




A

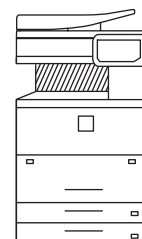

MX-M6570/M7570

Configuration B

 - B** This configuration requires the MX-RB24. These items cannot be combined with items from other finishing configurations.




← and



B

Configuration C

 
- C** These configurations require the MX-RB26 and a finisher, but do not require the MX-PN16B. The MX-FN34 cannot be used with the MX-FN35. These items cannot be combined with items from other finishing configurations.

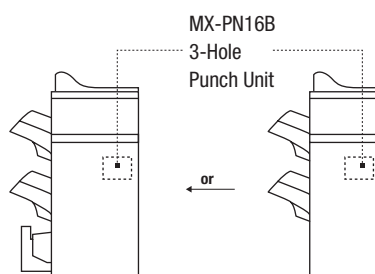

MX-FN35
3K Saddle Stitch
Finisher
(65-sheet staple)

MX-FN34
3K Finisher
(65-sheet staple)

 
C

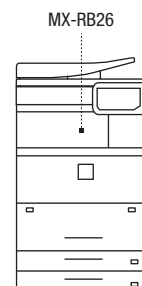

MX-M6570/M7570
+ MX-RB26
Paper Pass Unit
(required for Configurations
C and D)


Configuration D

 - D** These configurations require the MX-RB26, MX-RB27 and a finisher. The MX-RB13 cannot be used with the MX-FD10. The MX-FN21 cannot be used with the MX-FN22. These items cannot be combined with items from other finishing configurations.

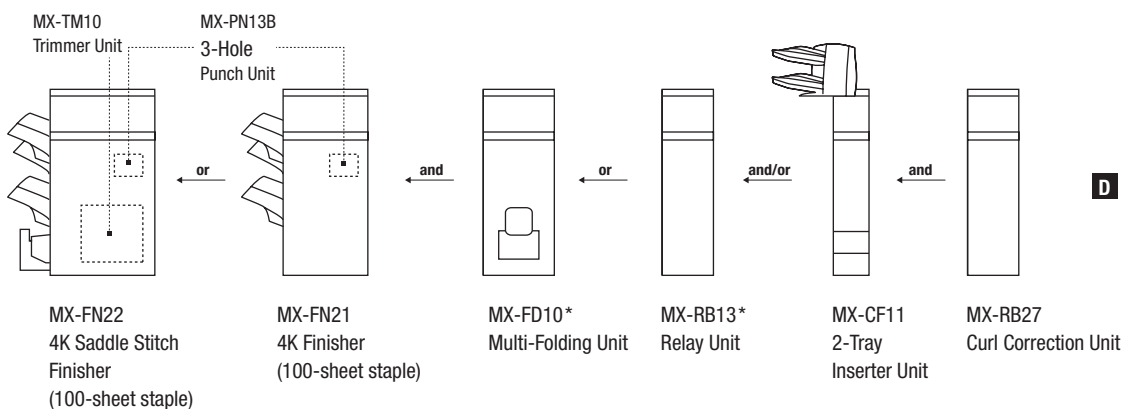

*A Relay Unit or Multi-Folding Unit is required to connect a Finisher and 2-Tray Inserter Unit directly.

 STEP 3: SELECT CONNECTIVITY COMPONENTS

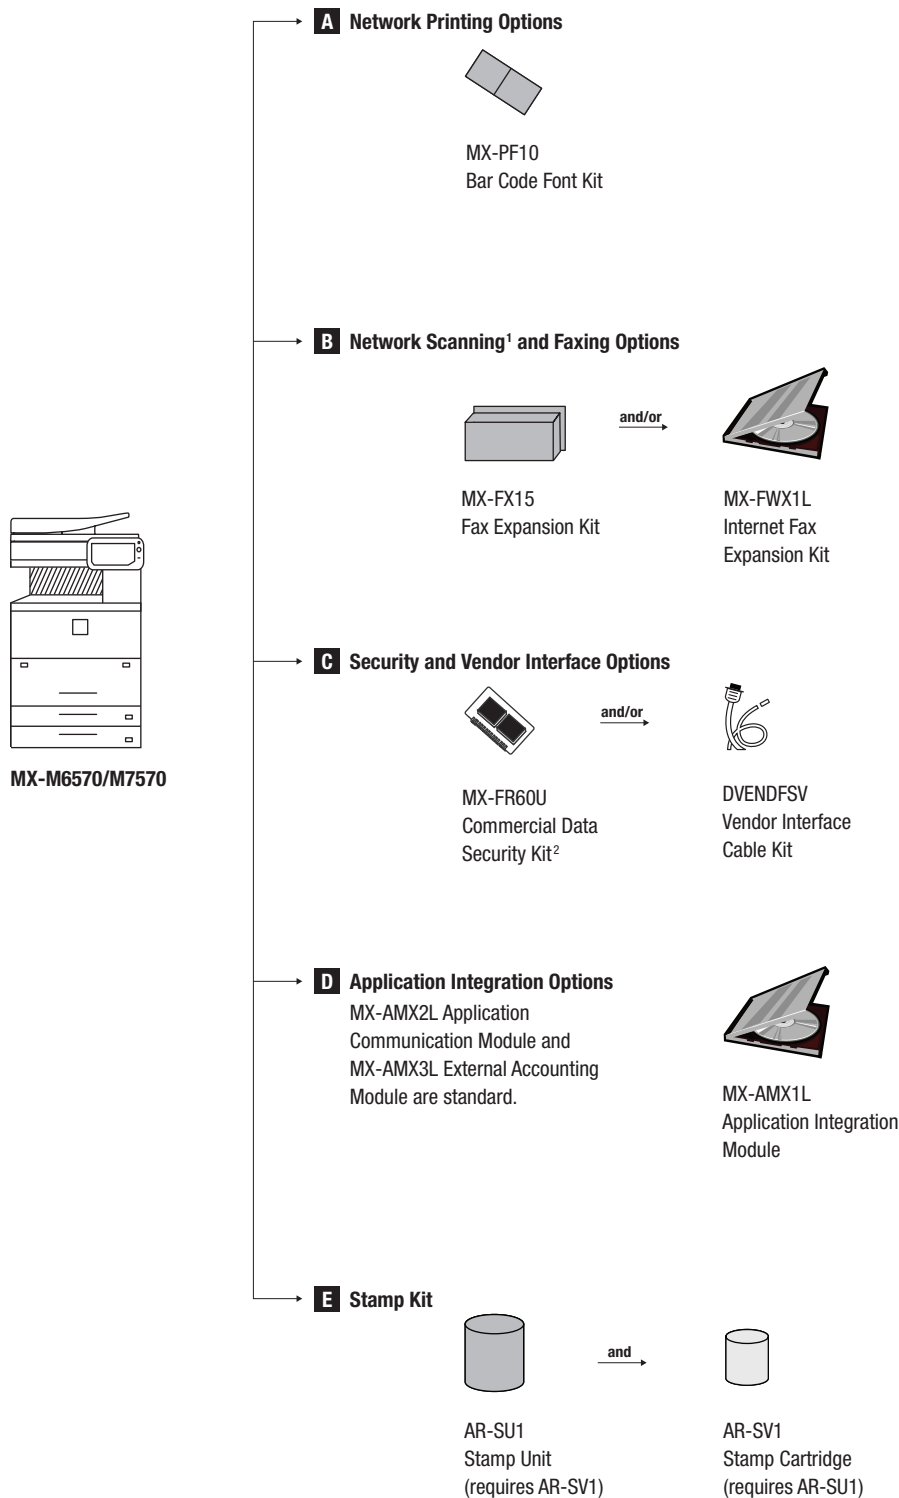

¹ Sharpdesk® license upgrade kits are also available, see price list.

² Not available at time of launch.