



SPACE REQUIREMENTS AND PLANNING GUIDE

Width Measurements

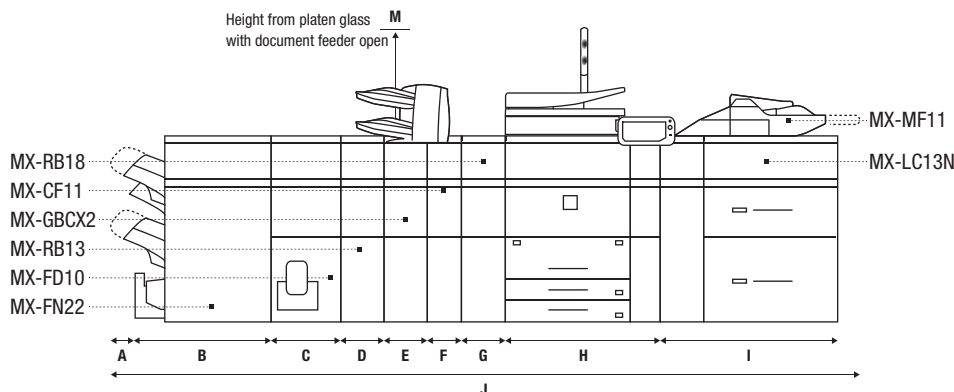

Note: In addition to the above dimensions, allow three feet of space on all sides for consumable replenishment, paper jam removal, and maintenance and service procedures. Images may not be to scale.

Depth Measurements (overhead view)

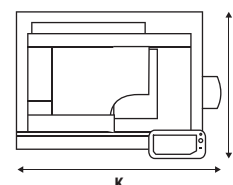

| | |
|---|----------|
| A | 5" |
| B | 30-1/4" |
| C | 13-1/4" |
| D | 8-3/8" |
| E | 16-3/4" |
| F | 6-1/2" |
| G | 8-3/8" |
| H | 34-3/8" |
| I | 35-3/8" |
| J | 150-3/4" |
| K | 48-7/8" |
| L | 33-1/4" |
| M | 23-1/4" |

Installing Dealer

Read this document in its entirety before planning your configuration.

Plan ahead and make sure your installation is a great success! Remember to check the latest information on these products and make sure that the following items are available prior to installation.

- Verify dedicated power source and check for stability. The MX-M905 Document System requires a 208-240 VAC, 60 Hz, 20 Amp power source.



The MX-M905 main unit requires one 208-240 VAC, 20 Amp power source.




The MX-FN21, MX-FN22 and MX-LC13N options each require separate 120 VAC, 15 Amp power sources.


- Confirm that you have the latest firmware available from www.sharp-pcservice.com to upgrade your MX-M905 Document System immediately.
- Some accessories require a product key for operation. You should obtain the accessory Application Code and machine's serial number to register the product key online prior to arrival at the customer location.
- Check to see if My Sharp™ online training is set up for the end-user.
- Verify that the customer has enough supplies on-hand to complete a large rush job. After-hours printing and/or holiday work may take place following an installation. See Supplies & Accessories list on the following page.



Measurements with MX-FN21, MX-FN24, MX-FN25, MX-SL10N and MX-RB18.

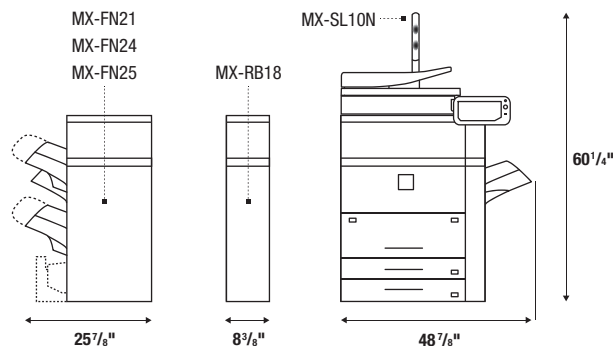


Base Unit Measurements Shown with MX-LC12 or MX-LC3N.

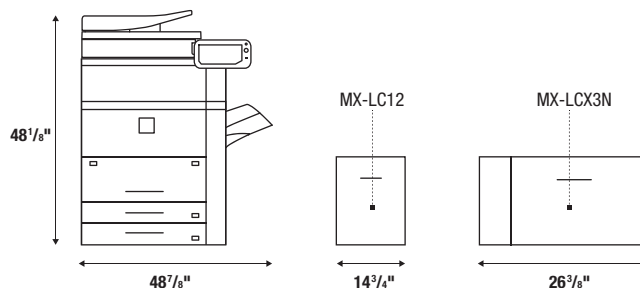

Illustrations shown are for measurement purposes only and may not be to scale. For configurations see subsequent pages.

STEP 1: CHOOSE PAPER FEED CONFIGURATION

MX-SL10N (optional)
Status Indicator can be
added to any configuration.

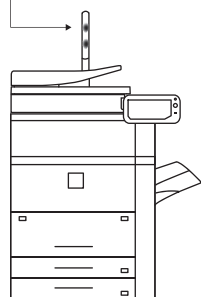


MX-M905

A



MX-LC12
Large Capacity
Cassette
(Letter)

 or




MX-LCX3N
Large Capacity
Cassette
(Ledger)

B




MX-RB16
LCT Mounting
Kit

 and



MX-MF11
500-sheet
Multi Bypass Tray
(not required)

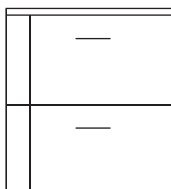


MX-LC13N
Large Capacity Tray
(2 Drawers; Ledger)

Configuration A

A These items cannot be combined with items from paper feed configuration B.

Configuration B


B This configuration requires the MX-RB16 and MX-LC13N. The MX-MF11 can also be added to the MX-LC13N, but cannot be used alone. These items cannot be combined with items from paper feed configuration A.

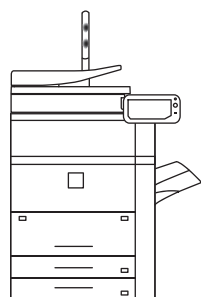


1. Base Unit



2. MX-LC12

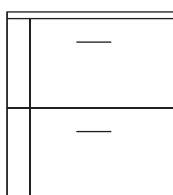

 3. MX-LC13N



4. MX-LCX3N



5. MX-MF11

Supported Paper Weights

1. Base Unit

Upper Drawer (tandem): 16 lb. bond to 28 lb. bond
Middle/Lower Drawer: 16 lb. bond to 100 lb. bristol
Bypass Tray: 15 lb. bond to 110 lb. cover

2. MX-LC12

16 lb. bond to 100 lb. bristol

3. MX-LC13N

Upper/Lower Drawer: 15 lb. bond to 110 lb. cover

4. MX-LCX3N

16 lb. bond to 110 lb. bristol

5. MX-MF11

15 lb. bond to 100 lb. bristol

Supplies & Accessories

- Toner Cartridge
- Developer
- Drum
- Waste Toner Bottle

MX-900NT
MX-900NV
MX-850NR
MX-850HB


- 120V/15A Power Filter (for MX-FN21, MX-FN22 and MX-LC13N)
- 208-240V/20A Power Filter

AR-D5133NT
MX-E524ZNT

STEP 2: CHOOSE FINISHING CONFIGURATION


Configuration A: 50-sheet Staple Finishing

- A** This configuration requires the MX-FN24 or MX-FN25.
 The MX-FN24 cannot be used with the MX-FN25.
 The MX-PNX4B can be added, but cannot be used alone.

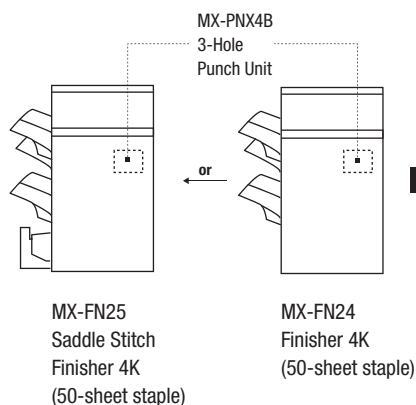


Configuration B: 100-sheet Staple Finishing

- B** This configuration requires a finisher and the MX-RB18.
 The MX-FN21 cannot be used with the MX-FN22.
 These items cannot be combined with items from configuration A.

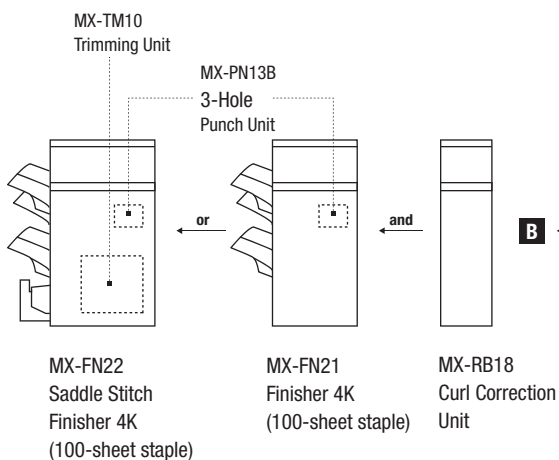


Configuration C: Advanced 100-sheet Staple Finishing

- C** This configuration requires the MX-RB18 and the MX-FN21 or MX-FN22.
- The MX-CF11, MX-GBCX2, and the MX-FD10 are all optional.
 - The MX-GBCX2 requires the MX-RB13.
 - The MX-RB13 is required to connect a 100-sheet finisher and MX-CF11.
 - The MX-FN21 cannot be used with the MX-FN22.
 - The MX-SL10N Status Indicator can be added to any configuration.

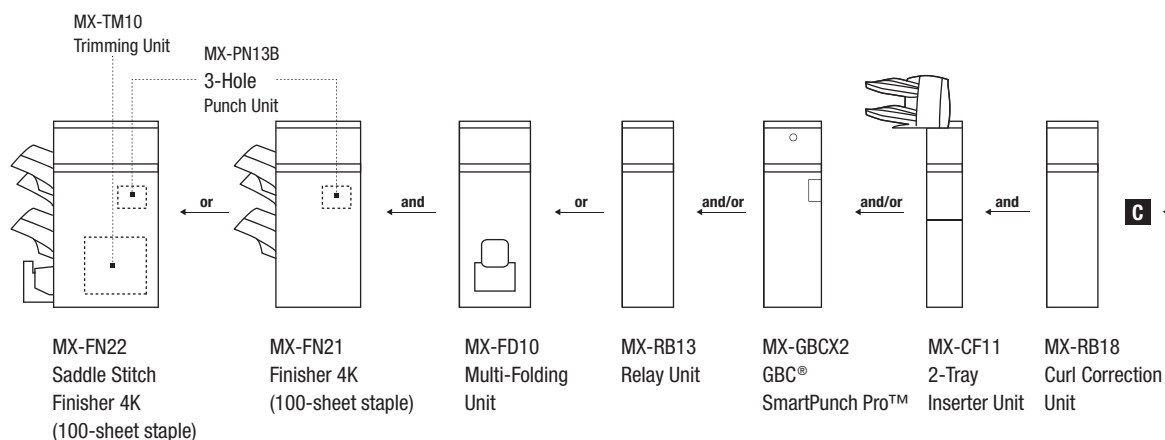

MX-M905

STEP 3: SELECT CONNECTIVITY COMPONENTS

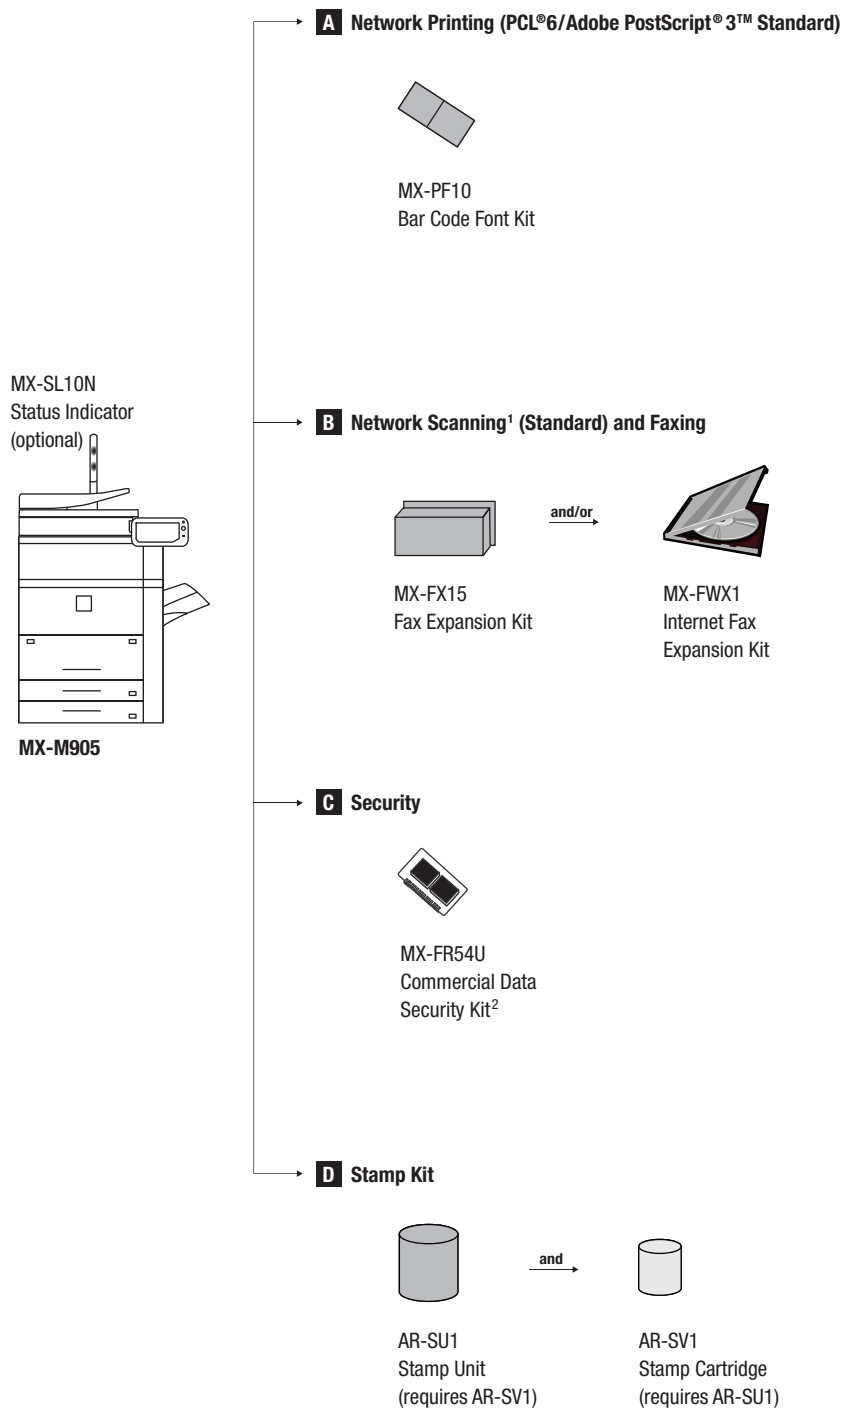

¹ Sharpdesk® license upgrade kits are also available, see price list.

² See price list for availability dates.

Design and specifications are subject to change without notice. All product dimensions listed are approximate.