
SHARP

BP-90C70/90C80

SPACE REQUIREMENTS AND PLANNING GUIDE

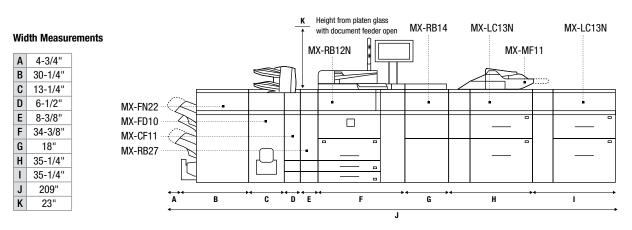

Note: In addition to the above dimensions, allow three feet of space on all sides for consumable replenishment, paper jam removal, and maintenance and service procedures. Images may not be to scale.

Installing Dealer

Read this document in its entirety before planning your configuration.

Plan ahead and make sure your installation is a great success! Remember to check the latest information on these products and make sure that the following items are available prior to installation.

 Verify dedicated power source and check for stability. The BP-90C70/90C80 Document Systems require a 208-240 VAC, 60 Hz, 20 Amp power source.



The BP-90C70/90C80 main unit requires one 208-240 VAC, 20 Amp power source.



The MX-BM50, MX-FN21, MX-FN22, and MX-LC13N options each require separate 120 VAC, 15 Amp power source plugs.

- Confirm that you have the latest firmware available from the Service Success Center to upgrade your BP-90C70/90C80 Document Systems.
- Some accessories require a product key for operation. You should obtain the accessory Application Code and machine's serial number to register the product key online prior to arrival at the customer location.
- Check to see if My Sharp[™] online training is set up for the end-user.




· Verify that the customer has enough supplies on-hand to complete a large rush job. After-hours printing and/or holiday work may take place following an installation. See Supplies & Accessories list on the following page.


* Illustrations shown are for measurement purposes only and may not be to scale. For configurations see subsequent pages.

Design and specifications are subject to change without notice. All product dimensions listed are approximate. Sharp, Sharp OSA, My Sharp and all related trademarks are trademarks or registered trademarks of Sharp Corporation and/or its affiliated companies. PCL is a registered trademark of HP Company. Adobe and PostScript are registered trademarks of Adobe Systems Inc. All other trademarks are the property of their respective owners.

Depth Measurements (overhead view).* 31¹/8" 48⁷/₈"

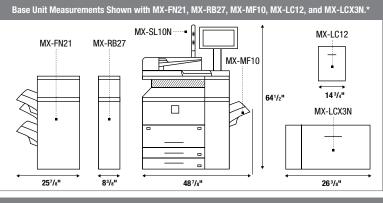


Measurements for GBC SmartPunch™ Plus and Plockmatic Booklet Maker System.*

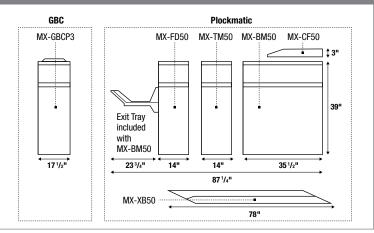

SHARP

STEP 1: CHOOSE RIGHT SIDE EXIT TRAY AND PAPER FEED OPTIONS

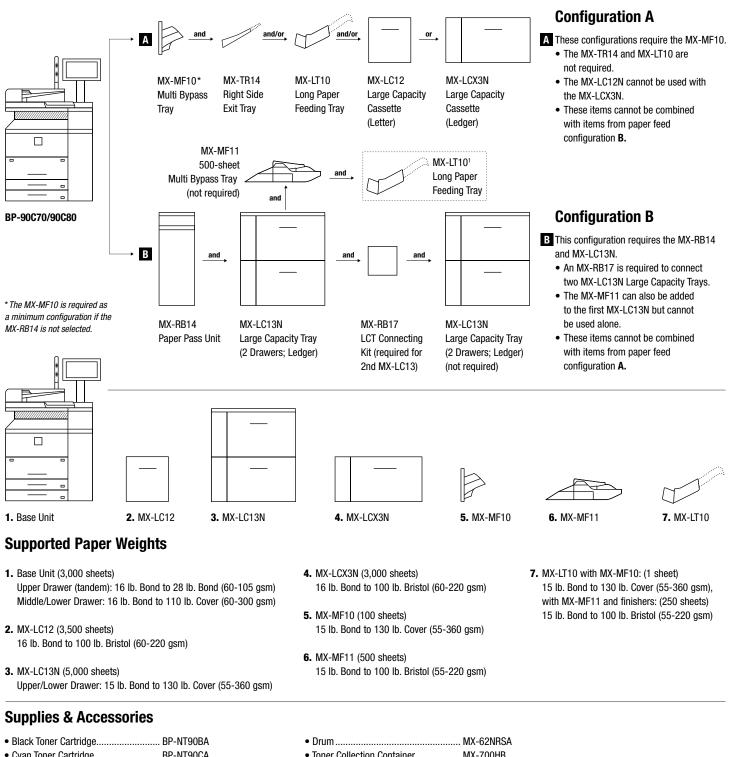

- Cyan Toner Cartridge BP-NT90CA
- Magenta Toner Cartridge..... BP-NT90MA
- Yellow Toner Cartridge BP-NT90YA
- Black Developer²...... BP-NV90BA
- Cyan/Magenta/Yellow Developer² BP-NV90SA
- Toner Collection Container MX-700HB
- 120V/15A Power Filter AR-D5133NT (for MX-BM50, MX-FN21, MX-FN22, MX-LC13N)
- 208-240V/20A Power Filter..... MX-E524ZNT (for BP-90C70/90C80)


¹Requires optional BP-LTKT Long Paper Feed Tray Support Kit. ²Black and Color Developer included. © 2023 Sharp Electronics Corporation. All rights reserved.


SHARP®

BP-90C70/90C80 CONFIGURATION CHART

STEP 2: CHOOSE FINISHING CONFIGURATION

Configuration A

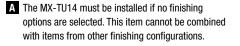

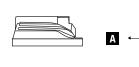

MX-LT10*

Long Paper

Feeding Tray



MX-RB12N

Paper Pass

Unit

MX-RB27

Unit


Curl Correction

MX-TU14 Center Exit Tray

Configuration B: Basic 100-sheet Staple Finishing

B This configuration requires the MX-RB12N, MX-RB27 and the MX-FN21 or MX-FN22.

- The MX-FN21 cannot be used with the MX-FN22.
- The MX-BM50 requires the MX-FN21 and MX-PCB50.
- The MX-FD50 must be connected to the MX-TM50.
- The MX-SL10N Status Indicator can be added to any configuration.
- The MX-PCB50 Plockmatic Interface Kit is included with the MX-BM50.

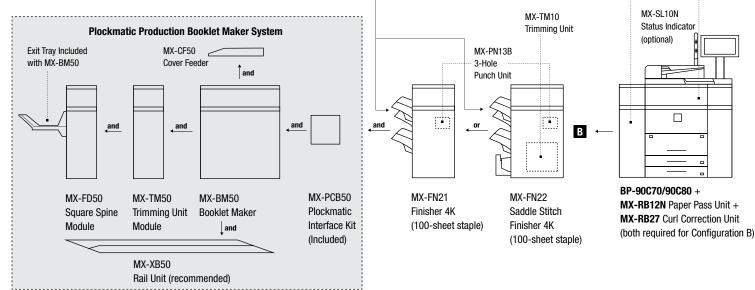



and

*Requires optional BP-LTKT Long Paper Feed Tray Support Kit. © 2023 Sharp Electronics Corporation. All rights reserved.

SHARP[®]

STEP 2: CHOOSE FINISHING CONFIGURATION (CONTINUED)

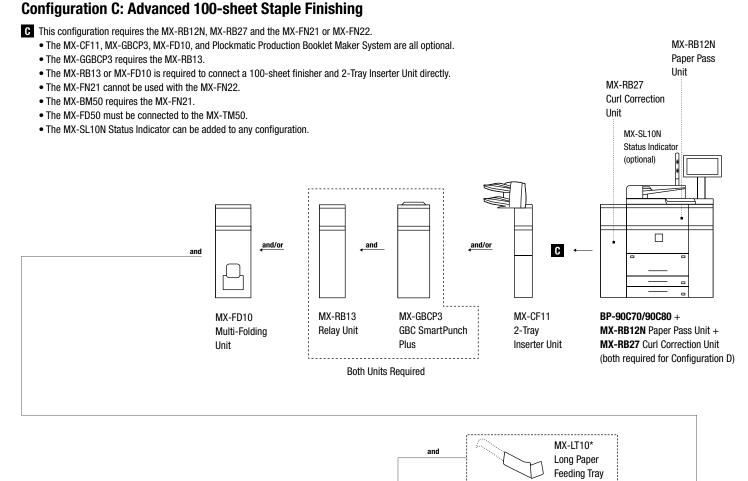


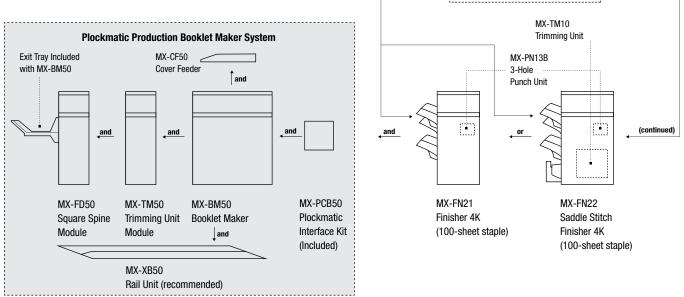

SHARP_®

BP-90C70/90C80 CONFIGURATION CHART

STEP 1: CHOOSE RIGHT SIDE EXIT TRAY AND PAPER FEED OPTIONS

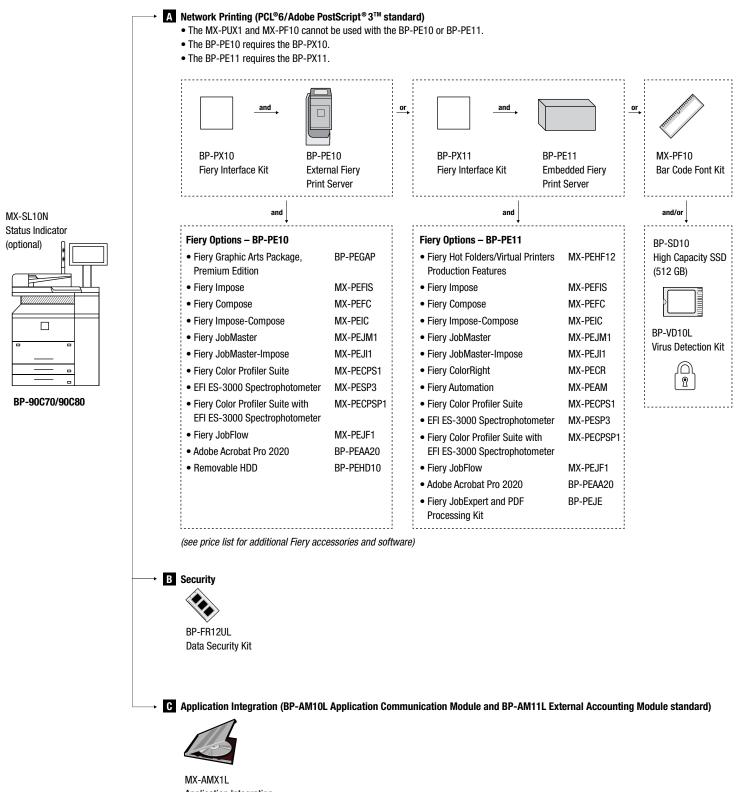

Application Integration Module